

Solid State Relay Cross References

Disclaimer: These are suggested cross references, testing must be performed to confirm suitability for actual application

Sensata /Crydom PN Part Numbers	Altran Part Numbers	Description
CX241	ASR-SD240D3ZL	PCB mounted SSR 240VAC 3A zero crossing
MP120D3		PCB mounted SSR 240VAC 3A zero crossing
MP240D3		PCB mounted SSR 240VAC 3A zero crossing
CX241R	ASR-SD240D3RL	PCB mounted SSR 240VAC 3A random on
D2W203F	ASR-SD240D3ZW	PCB mounted SSR 240VAC 3A zero crossing
D2W202F		PCB mounted SSR 240VAC 3A zero crossing
CXE240D5	ASR-SD240D5ZH	PCB mounted SSR 240VAC 5A zero crossing
MCXE240D5		PCB mounted SSR 240VAC 5A zero crossing
MCX240D5	ASR-SD240D5ZL	PCB mounted SSR 240VAC 5A zero crossing
MP120D4		PCB mounted SSR 240VAC 5A zero crossing
MP240D4		PCB mounted SSR 240VAC 5A zero crossing
CX240D5		PCB mounted SSR 240VAC 5A zero crossing
CXE240D5R	ASR-SD240D5RH	PCB mounted SSR 240VAC 5A random on
MCXE240D5R		PCB mounted SSR 240VAC 5A random on
CX240D5R	ASR-SD240D5RL	PCB mounted SSR 240VAC 5A random on
MCX240D5R		PCB mounted SSR 240VAC 5A random on
GA8-6B02R	ASR-SD240D5RW	PCB mounted SSR 240VAC 5A random on
GA8-6D05R		PCB mounted SSR 240VAC 5A random on
GA8-6B02	ASR-SD240D5ZW	PCB mounted SSR 240VAC 5A zero crossing
GA8-6D05		PCB mounted SSR 240VAC 5A zero crossing
D2W203F-11		PCB mounted SSR 240VAC 5A zero crossing
CXE380D5	ASR-SD380D5ZH	PCB mounted SSR 380VAC 5A zero crossing
MCXE380D5		PCB mounted SSR 380VAC 5A zero crossing
CX380D5	ASR-SD380D5ZL	PCB mounted SSR 380VAC 5A zero crossing
MCX380D5		PCB mounted SSR 380VAC 5A zero crossing
CXE380D5R	ASR-SD380D5RH	PCB mounted SSR 380VAC 5A random on
MCXE380D5R		PCB mounted SSR 380VAC 5A random on
CX380D5R	ASR-SD380D5RL	PCB mounted SSR 380VAC 5A random on
MCX380D5R		PCB mounted SSR 380VAC 5A random on
CXE480D5	ASR-SD480D5ZH	PCB mounted SSR 480VAC 5A zero crossing
MCXE480D5		PCB mounted SSR 480VAC 5A zero crossing
CX480D5	ASR-SD480D5ZL	PCB mounted SSR 480VAC 5A zero crossing
MCX480D5		PCB mounted SSR 480VAC 5A zero crossing

CXE480D5R	ASR-SD480D5RH	PCB mounted SSR 480VAC 5A random on	
MCXE480D5R		PCB mounted SSR 480VAC 5A random on	
CX480D5R	ASR-SD480D5RL	PCB mounted SSR 480VAC 5A random on	
MCX480D5R		PCB mounted SSR 480VAC 5A random on	
PFE240D25	ASR-SH240D25ZW	PCB mounted Heatsink integrated SSR 240VAC 25A zero crossing	
SPFE240D25		PCB mounted Heatsink integrated SSR 240VAC 25A zero crossing	
SPF240D25		PCB mounted Heatsink integrated SSR 240VAC 25A zero crossing	
LS240D12		PCB mounted Heatsink integrated SSR 240VAC 25A zero crossing	
LS240D8		PCB mounted Heatsink integrated SSR 240VAC 25A zero crossing	
LSE240D12		PCB mounted Heatsink integrated SSR 240VAC 25A zero crossing	
LSE240D8		PCB mounted Heatsink integrated SSR 240VAC 25A zero crossing	
PF240D25		PCB mounted Heatsink integrated SSR 240VAC 25A zero crossing	
PFE240D25R	ASR-SH240D25RW	PCB mounted Heatsink integrated SSR 240VAC 25A random on	
SPFE240D25R		PCB mounted Heatsink integrated SSR 240VAC 25A random on	
SPF240D25R		PCB mounted Heatsink integrated SSR 240VAC 25A random on	
LS240D12R		PCB mounted Heatsink integrated SSR 240VAC 25A random on	
LS240D8R		PCB mounted Heatsink integrated SSR 240VAC 25A random on	
LSE240D12R		PCB mounted Heatsink integrated SSR 240VAC 25A random on	
LSE240D8R		PCB mounted Heatsink integrated SSR 240VAC 25A random on	
PF240D25R		PCB mounted Heatsink integrated SSR 240VAC 25A random on	
SPF380D25	ASR-SH480D25ZW	PCB mounted Heatsink integrated SSR 480VAC 25A zero crossing	
PF380D25		PCB mounted Heatsink integrated SSR 480VAC 25A zero crossing	
PFE380D25		PCB mounted Heatsink integrated SSR 480VAC 25A zero crossing	
SPFE480D25		PCB mounted Heatsink integrated SSR 480VAC 25A zero crossing	
SPF480D25		PCB mounted Heatsink integrated SSR 480VAC 25A zero crossing	
PF480D25		PCB mounted Heatsink integrated SSR 480VAC 25A zero crossing	
PFE480D25		PCB mounted Heatsink integrated SSR 480VAC 25A zero crossing	
SPF380D25R		PCB mounted Heatsink integrated SSR 480VAC 25A random on	
PF380D25R	PCB mounted Heatsink integrated SSR 480VAC 25A random on		
PFE380D25R	ASR-SH480D25RW	PCB mounted Heatsink integrated SSR 480VAC 25A random on	
SPFE480D25R		PCB mounted Heatsink integrated SSR 480VAC 25A random on	
SPF480D25R		PCB mounted Heatsink integrated SSR 480VAC 25A random on	
PF480D25R		PCB mounted Heatsink integrated SSR 480VAC 25A random on	
PFE480D25R		PCB mounted Heatsink integrated SSR 480VAC 25A random on	
GA5-2A10		ASR-SI240A10ZY	Single phase panel mounted AC to AC SSR 240VAC 10A zero crossing
GA5-4A10			Single phase panel mounted AC to AC SSR 240VAC 10A zero crossing
TA1210			Single phase panel mounted AC to AC SSR 240VAC 10A zero crossing

TA2410		Single phase panel mounted AC to AC SSR 240VAC 10A zero crossing
CWA2490	ASR-SI240A100ZY-LH	Single phase panel mounted AC to AC SSR 240VAC 100A zero crossing
CWA2490-10		Single phase panel mounted AC to AC SSR 240VAC 100A random on
CWA2490P	ASR-SI240A100ZY-LMH	Single phase panel mounted AC to AC SSR 240VAC 100A random on
CL240A10	ASR-SI240A10ZY-L	Single phase panel mounted AC to AC SSR 240VAC 10A zero crossing
CL240A05		Single phase panel mounted AC to AC SSR 240VAC 10A zero crossing
CL240A05C	ASR-SI240A10ZY-LV	Single phase panel mounted AC to AC SSR 240VAC 10A zero crossing
CL240A10C		Single phase panel mounted AC to AC SSR 240VAC 10A zero crossing
CWU2410	ASR-SI240A10ZY-LDU	Single phase panel mounted AC to AC SSR 240VAC 10A zero crossing
CWA2410P	ASR-SI240A10ZY-LMU	Single phase panel mounted AC to AC SSR 240VAC 10A zero crossing
CL240A05R	ASR-SI240A10RY-L	Single phase panel mounted AC to AC SSR 240VAC 10A random on
CL240A10R		Single phase panel mounted AC to AC SSR 240VAC 10A random on
CL240A05RC	ASR-SI240A10RY-LV	Single phase panel mounted AC to AC SSR 240VAC 10A random on
CL240A10RC		Single phase panel mounted AC to AC SSR 240VAC 10A random on
CWA2410-10	ASR-SI240A10RY-LU	Single phase panel mounted AC to AC SSR 240VAC 10A random on
CWA24125	ASR-SI240A125ZY-LH	Single phase panel mounted AC to AC SSR 240VAC 125A zero crossing
CWA24125P	ASR-SI240A125ZY-LMH	Single phase panel mounted AC to AC SSR 240VAC 125A zero crossing
CWA24125-10	ASR-SI240A125RY-LH	Single phase panel mounted AC to AC SSR 240VAC 125A random on
GA5-2A25	ASR-SI240A25ZY	Single phase panel mounted AC to AC SSR 240VAC 25A zero crossing
GA5-4A25		Single phase panel mounted AC to AC SSR 240VAC 25A zero crossing
TA1225		Single phase panel mounted AC to AC SSR 240VAC 25A zero crossing
TA2425		Single phase panel mounted AC to AC SSR 240VAC 25A zero crossing
CWU2425P		ASR-SI240A25ZY-LMDU
CWU2425-10	ASR-SI240A25RY-LDU	Single phase panel mounted AC to AC SSR 240VAC 25A random on
CWU2450-10	ASR-SI240A60ZY-LDU	Single phase panel mounted AC to AC SSR 240VAC 60A zero crossing
CWA2450	ASR-SI240A60ZY-LU	Single phase panel mounted AC to AC SSR 240VAC 60A zero crossing
CWU2450P	ASR-SI240A60ZY-LMDU	Single phase panel mounted AC to AC SSR 240VAC 60A zero crossing
CWA2450P	ASR-SI240A60ZY-LMU	Single phase panel mounted AC to AC SSR 240VAC 60A zero crossing
G240A45R	ASR-SI240A60RY-L	Single phase panel mounted AC to AC SSR 240VAC 60A random on
CWA2450-10	ASR-SI240A60RY-LU	Single phase panel mounted AC to AC SSR 240VAC 60A random on
CSW2410	ASR-SI240AU10ZW	Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
D1210		Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
D2410		Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
D2410T		Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
GA5-2D10		Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
D2490		Single phase panel mounted DC to AC SSR 240VAC 100A zero crossing
CSE2490		Single phase panel mounted DC to AC SSR 240VAC 100A zero crossing

CSW2490	ASR-SI240D100ZW-LH	Single phase panel mounted DC to AC SSR 240VAC 100A zero crossing
CMD2490		Single phase panel mounted DC to AC SSR 240VAC 100A zero crossing
PSD2490		Single phase panel mounted DC to AC SSR 240VAC 100A zero crossing
CWD2490	ASR-SI240D100ZW-LR6U	Single phase panel mounted DC to AC SSR 240VAC 100A zero crossing
CSW2490P	ASR-SI240D100ZW-LMH	Single phase panel mounted DC to AC SSR 240VAC 100A zero crossing
CWD2490P	ASR-SI240D100ZW-LMR6U	Single phase panel mounted DC to AC SSR 240VAC 100A zero crossing
D2490-10	ASR-SI240D100RW-H	Single phase panel mounted DC to AC SSR 240VAC 100A random on
CSW2490-10		Single phase panel mounted DC to AC SSR 240VAC 100A random on
CWD2490-10	ASR-SI240D100RW-LR6U	Single phase panel mounted DC to AC SSR 240VAC 100A random on
PSD2410	ASR-SI240D10ZW-L	Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
TD1210		Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
TD2410		Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
D2410G	ASR-SI240D10ZW-LR5	Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
CL240D05		Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
CL240D10		Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
CWD2410	ASR-SI240D10ZW-LR5U	Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
CL240D05C	ASR-SI240D10ZW-LR4	Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
CL240D10C		Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
CL240D10RC		Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
D2410K	ASR-SI240D10ZW-LR7	Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
D1210GSH	ASR-SI240D10ZW-LU	Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
D2410PG	ASR-SI240D10ZW-LMR5	Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
CWD2410P	ASR-SI240D10ZW-LMR5U	Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
CSW2410P	ASR-SI240D10ZW-M	Single phase panel mounted DC to AC SSR 240VAC 10A zero crossing
D1210-10	ASR-SI240D10RW	Single phase panel mounted DC to AC SSR 240VAC 10A random on
CSW2410-10		Single phase panel mounted DC to AC SSR 240VAC 10A random on
D2410-10	ASR-SI240D10RW-L	Single phase panel mounted DC to AC SSR 240VAC 10A random on
CL240D05R	ASR-SI240D10RW-LR5	Single phase panel mounted DC to AC SSR 240VAC 10A random on
CL240D10R		Single phase panel mounted DC to AC SSR 240VAC 10A random on
CWD2410-10	ASR-SI240D10RW-LR5U	Single phase panel mounted DC to AC SSR 240VAC 10A random on
CL240D05RC	ASR-SI240D10RW-LR4	Single phase panel mounted DC to AC SSR 240VAC 10A random on
D2410FPG-10	ASR-SI240D10RW-LM	Single phase panel mounted DC to AC SSR 240VAC 10A random on
D24110	ASR-SI240D125ZW-LH	Single phase panel mounted DC to AC SSR 240VAC 125A zero crossing
D24125		Single phase panel mounted DC to AC SSR 240VAC 125A zero crossing
CWD24125	ASR-SI240D125ZW-LR6U	Single phase panel mounted DC to AC SSR 240VAC 125A zero crossing
D24110-10	ASR-SI240D125RW-LH	Single phase panel mounted DC to AC SSR 240VAC 125A random on
D24125-10		Single phase panel mounted DC to AC SSR 240VAC 125A random on

CWD24125-10	ASR-SI240D125RW-LR6U	Single phase panel mounted DC to AC SSR 240VAC 125A random on	
CWD24125P	ASR-SI240D125RW-LMR6U	Single phase panel mounted DC to AC SSR 240VAC 125A random on	
CSE2425	ASR-SI240D25ZW-L	Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
CSW2425		Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
D1225		Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
D2425		Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
GA5-2D25		Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
G240D25V		Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
CSW2425S		Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
PSD2425		Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
TD1225		Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
TD2425		Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
CSW2425G		Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
CSW2425F		ASR-SI240D25ZW-LQ	Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing
D2425G		ASR-SI240D25ZW-LR5	Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing
CWD2425		ASR-SI240D25ZW-LR5U	Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing
CWD2425H	ASR-SI240D25ZW-LR5UP	Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
D2425K	ASR-SI240D25ZW-LR7	Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
D2425H	ASR-SI240D25ZW-LP	Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
CWA2425H	ASR-SI240D25ZW-LUP	Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
CSW2425P	ASR-SI240D25ZW-LM	Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
D2425PG	ASR-SI240D25ZW-LMR5	Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
CWD2425P	ASR-SI240D25ZW-LMR5U	Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
CWA2425P	ASR-SI240D25ZW-LMU	Single phase panel mounted DC to AC SSR 240VAC 25A zero crossing	
CSW2425-10	ASR-SI240D25RW-L	Single phase panel mounted DC to AC SSR 240VAC 25A random on	
D1225-10		Single phase panel mounted DC to AC SSR 240VAC 25A random on	
D2425-10		Single phase panel mounted DC to AC SSR 240VAC 25A random on	
D2425S-10		Single phase panel mounted DC to AC SSR 240VAC 25A random on	
D2425H-10	ASR-SI240D25RW-LP	Single phase panel mounted DC to AC SSR 240VAC 25A random on	
CWD2425-10	ASR-SI240D25RW-LR5U	Single phase panel mounted DC to AC SSR 240VAC 25A random on	
CWA2425-10	ASR-SI240D25RW-LU	Single phase panel mounted DC to AC SSR 240VAC 25A random on	
D1240	ASR-SI240D40ZW-L	Single phase panel mounted DC to AC SSR 240VAC 40A zero crossing	
D2440		Single phase panel mounted DC to AC SSR 240VAC 40A zero crossing	
D2440KS	ASR-SI240D40ZW-LR7	Single phase panel mounted DC to AC SSR 240VAC 40A zero crossing	
D1240-10	ASR-SI240D40RW-L	Single phase panel mounted DC to AC SSR 240VAC 40A random on	
D2440-10		Single phase panel mounted DC to AC SSR 240VAC 40A random on	
CSE2450		Single phase panel mounted DC to AC SSR 240VAC 60A zero crossing	

CSW2450	ASR-SI240D60ZW-L	Single phase panel mounted DC to AC SSR 240VAC 60A zero crossing
D2450		Single phase panel mounted DC to AC SSR 240VAC 60A zero crossing
PSD2450		Single phase panel mounted DC to AC SSR 240VAC 60A zero crossing
CMD2450	ASR-SI240D60ZW-LV	Single phase panel mounted DC to AC SSR 240VAC 60A zero crossing
D2450G	ASR-SI240D60ZW-LR5	Single phase panel mounted DC to AC SSR 240VAC 60A zero crossing
CWD2450	ASR-SI240D60ZW-LR5U	Single phase panel mounted DC to AC SSR 240VAC 60A zero crossing
CWD2450H		Single phase panel mounted DC to AC SSR 240VAC 60A zero crossing
D2450GH	ASR-SI240D60ZW-LR5U	Single phase panel mounted DC to AC SSR 240VAC 60A zero crossing
D2450F	ASR-SI240D60ZW-LR7	Single phase panel mounted DC to AC SSR 240VAC 60A zero crossing
D2450K		Single phase panel mounted DC to AC SSR 240VAC 60A zero crossing
CWA2450H	ASR-SI240D60ZW-LUP	Single phase panel mounted DC to AC SSR 240VAC 60A zero crossing
CWD2450P	ASR-SI240D60ZW-LMR5U	Single phase panel mounted DC to AC SSR 240VAC 60A zero crossing
CSW2450P	ASR-SI240D60ZW-M	Single phase panel mounted DC to AC SSR 240VAC 60A zero crossing
CSW2450-10	ASR-SI240D60RW-L	Single phase panel mounted DC to AC SSR 240VAC 60A random on
D2450-10		Single phase panel mounted DC to AC SSR 240VAC 60A random on
D2450K-10		Single phase panel mounted DC to AC SSR 240VAC 60A random on
D2450KT-10		Single phase panel mounted DC to AC SSR 240VAC 60A random on
CWD2450-10	ASR-SI240D60RW-LR5U	Single phase panel mounted DC to AC SSR 240VAC 60A random on
CSE2475	ASR-SI240D80ZW-L	Single phase panel mounted DC to AC SSR 240VAC 80A zero crossing
CSW2475		Single phase panel mounted DC to AC SSR 240VAC 80A zero crossing
D2475		Single phase panel mounted DC to AC SSR 240VAC 80A zero crossing
G240D75		Single phase panel mounted DC to AC SSR 240VAC 80A zero crossing
CMD2475	ASR-SI240D80ZW-LV	Single phase panel mounted DC to AC SSR 240VAC 80A zero crossing
D2475PG	ASR-SI240D80ZW-LR6	Single phase panel mounted DC to AC SSR 240VAC 80A zero crossing
CSW2475P	ASR-SI240D80ZW-LMH	Single phase panel mounted DC to AC SSR 240VAC 80A zero crossing
CSW2475-10	ASR-SI240D80RW-LH	Single phase panel mounted DC to AC SSR 240VAC 80A random on
D2475-10		Single phase panel mounted DC to AC SSR 240VAC 80A random on
HA4890	ASR-SI480A100ZY-LH	Single phase panel mounted AC to AC SSR 480VAC 100A zero crossing
CWA4890	ASR-SI480A100ZY-LHU	Single phase panel mounted AC to AC SSR 480VAC 100A zero crossing
CWA4890P	ASR-SI480A100ZY-LMHU	Single phase panel mounted AC to AC SSR 480VAC 100A zero crossing
HA4890-10	ASR-SI480A100RY-LH	Single phase panel mounted AC to AC SSR 480VAC 100A random on
CWA4890-10	ASR-SI480A100RY-LHU	Single phase panel mounted AC to AC SSR 480VAC 100A random on
CWA4810	ASR-SI480A10ZY-LU	Single phase panel mounted AC to AC SSR 480VAC 10A zero crossing
CWA4810P	ASR-SI480A10ZY-LMU	Single phase panel mounted AC to AC SSR 480VAC 10A zero crossing
CWA4810-10	ASR-SI480A10RY-LU	Single phase panel mounted AC to AC SSR 480VAC 10A random on
HA48110	ASR-SI480A125ZY-LH	Single phase panel mounted AC to AC SSR 480VAC 125A zero crossing
HA48125		Single phase panel mounted AC to AC SSR 480VAC 125A zero crossing

CWA48125	ASR-SI480A125ZY-LHU	Single phase panel mounted AC to AC SSR 480VAC 125A zero crossing
HA48110-10	ASR-SI480A125RY-LH	Single phase panel mounted AC to AC SSR 480VAC 125A random on
HA48125-10		Single phase panel mounted AC to AC SSR 480VAC 125A random on
CWA48125-10	ASR-SI480A125RY-LHU	Single phase panel mounted AC to AC SSR 480VAC 125A random on
CWA48125P	ASR-SI480A125RY-LMHU	Single phase panel mounted AC to AC SSR 480VAC 125A random on
HA4812F	ASR-SI480A25ZY-Q	Single phase panel mounted AC to AC SSR 480VAC 25A zero crossing
HA4812	ASR-SI480A25ZY-L	Single phase panel mounted AC to AC SSR 480VAC 25A zero crossing
HA4825		Single phase panel mounted AC to AC SSR 480VAC 25A zero crossing
CWA4825	ASR-SI480A25ZY-LU	Single phase panel mounted AC to AC SSR 480VAC 25A zero crossing
CWU4825P	ASR-SI480A25ZD-LMU	Single phase panel mounted AC to AC SSR 480VAC 25A zero crossing
HA4812-10	ASR-SI480A25RY-L	Single phase panel mounted AC to AC SSR 480VAC 25A random on
HA4825-10		Single phase panel mounted AC to AC SSR 480VAC 25A random on
CWU4825-10	ASR-SI480A25RD-LU	Single phase panel mounted AC to AC SSR 480VAC 25A random on
CWA4825-10	ASR-SI480A25RY-LU	Single phase panel mounted AC to AC SSR 480VAC 25A random on
CWA4825P	ASR-SI480A25RY-LMU	Single phase panel mounted AC to AC SSR 480VAC 25A random on
HA4850	ASR-SI480A60ZY-L	Single phase panel mounted AC to AC SSR 480VAC 60A zero crossing
CWU4850	ASR-SI480A60ZD-LU	Single phase panel mounted AC to AC SSR 480VAC 60A zero crossing
CWU4850P	ASR-SI480A60ZD-LMU	Single phase panel mounted AC to AC SSR 480VAC 60A zero crossing
HA4850-10	ASR-SI480A60RY-L	Single phase panel mounted AC to AC SSR 480VAC 60A random on
CWU4850-10	ASR-SI480A60RD-LU	Single phase panel mounted AC to AC SSR 480VAC 60A random on
HA4875	ASR-SI480A80ZY-L	Single phase panel mounted AC to AC SSR 480VAC 80A zero crossing
HA4875-10	ASR-SI480A80RY	Single phase panel mounted AC to AC SSR 480VAC 80A random on
HA4875H	ASR-SI480A80ZY-P	Single phase panel mounted AC to AC SSR 480VAC 80A zero crossing
PSD4810	ASR-SI480D10ZW	Single phase panel mounted DC to AC SSR 480VAC 10A zero crossing
H12D4890	ASR-SI480D100ZW-LH	Single phase panel mounted DC to AC SSR 480VAC 100A zero crossing
HD4890		Single phase panel mounted DC to AC SSR 480VAC 100A zero crossing
HD4890K		Single phase panel mounted DC to AC SSR 480VAC 100A zero crossing
D4890		Single phase panel mounted DC to AC SSR 480VAC 100A zero crossing
PSD4890		Single phase panel mounted DC to AC SSR 480VAC 100A zero crossing
HD4890G		Single phase panel mounted DC to AC SSR 480VAC 100A zero crossing
HD4890KG		Single phase panel mounted DC to AC SSR 480VAC 100A zero crossing
CWD4890		ASR-SI480D100ZW-LR6U
CWD4890H	ASR-SI480D100ZW-LR6UP	Single phase panel mounted DC to AC SSR 480VAC 100A zero crossing
CWD4890P	ASR-SI480D100RW-LMR6U	Single phase panel mounted DC to AC SSR 480VAC 100A zero crossing
HD4890-10	ASR-SI480D100RW-LH	Single phase panel mounted DC to AC SSR 480VAC 100A random on
D4890-10		Single phase panel mounted DC to AC SSR 480VAC 100A random on
CWD4890-10	ASR-SI480D100RW-LR6U	Single phase panel mounted DC to AC SSR 480VAC 100A random on

CWD4810	ASR-SI480D10ZW-LR5U	Single phase panel mounted DC to AC SSR 480VAC 10A zero crossing
CWD4810P	ASR-SI480D10ZW-LMR5U	Single phase panel mounted DC to AC SSR 480VAC 100A zero crossing
CWD4810-10	ASR-SI480D10RW-LR5U	Single phase panel mounted DC to AC SSR 480VAC 100A random on
H12D48125	ASR-SI480D125ZW-LH	Single phase panel mounted DC to AC SSR 480VAC 125A zero crossing
HD48110		Single phase panel mounted DC to AC SSR 480VAC 125A zero crossing
HD48125		Single phase panel mounted DC to AC SSR 480VAC 125A zero crossing
HD48125K		Single phase panel mounted DC to AC SSR 480VAC 125A zero crossing
HD48125G		Single phase panel mounted DC to AC SSR 480VAC 125A zero crossing
CWD48125	ASR-SI480D125ZW-LR6U	Single phase panel mounted DC to AC SSR 480VAC 125A zero crossing
CWD48125P	ASR-SI480D125ZW-LMR6U	Single phase panel mounted DC to AC SSR 480VAC 125A zero crossing
HD48110-10	ASR-SI480D125RW-LH	Single phase panel mounted DC to AC SSR 480VAC 125A random on
HD48125-10		Single phase panel mounted DC to AC SSR 480VAC 125A random on
CWD48125-10	ASR-SI480D125RW-LR6U	Single phase panel mounted DC to AC SSR 480VAC 125A random on
H12D48125PG-10	ASR-SI480D125RW-LM	Single phase panel mounted DC to AC SSR 480VAC 125A random on
D4825	ASR-SI480D25W-L	Single phase panel mounted DC to AC SSR 480VAC 25A zero crossing
HD4812		Single phase panel mounted DC to AC SSR 480VAC 25A zero crossing
HD4812K		Single phase panel mounted DC to AC SSR 480VAC 25A zero crossing
HD4825		Single phase panel mounted DC to AC SSR 480VAC 25A zero crossing
PSD4825		Single phase panel mounted DC to AC SSR 480VAC 25A zero crossing
HD4825G		Single phase panel mounted DC to AC SSR 480VAC 25A zero crossing
H12D4825GH	ASR-SI480D25W-LP	Single phase panel mounted DC to AC SSR 480VAC 25A zero crossing
CWD4825	ASR-SI480D25W-LR5U	Single phase panel mounted DC to AC SSR 480VAC 25A zero crossing
CWD4825P	ASR-SI480D25W-LMR5U	Single phase panel mounted DC to AC SSR 480VAC 25A zero crossing
H12D4825KPGH	ASR-SI480D25W-LTP	Single phase panel mounted DC to AC SSR 480VAC 25A zero crossing
D4825-10	ASR-SI480D25RW-L	Single phase panel mounted DC to AC SSR 480VAC 25A random on
H12D4825-10		Single phase panel mounted DC to AC SSR 480VAC 25A random on
HD4812-10		Single phase panel mounted DC to AC SSR 480VAC 25A random on
HD4825-10		Single phase panel mounted DC to AC SSR 480VAC 25A random on
CWD4825-10	ASR-SI480D25RW-LR5U	Single phase panel mounted DC to AC SSR 480VAC 25A random on
D4840	ASR-SI480D40ZW-L	Single phase panel mounted DC to AC SSR 480VAC 40A zero crossing
HD4840		Single phase panel mounted DC to AC SSR 480VAC 40A zero crossing
D4840-10	ASR-SI480D40RW-L	Single phase panel mounted DC to AC SSR 480VAC 40A random on
HD4850	ASR-SI480D60ZW-L	Single phase panel mounted DC to AC SSR 480VAC 60A zero crossing
HD4850P		Single phase panel mounted DC to AC SSR 480VAC 60A zero crossing
HD4850G		Single phase panel mounted DC to AC SSR 480VAC 60A zero crossing
D4850		Single phase panel mounted DC to AC SSR 480VAC 60A zero crossing
H12D4850		Single phase panel mounted DC to AC SSR 480VAC 60A zero crossing

PSD4850		Single phase panel mounted DC to AC SSR 480VAC 60A zero crossing
D4850H	ASR-SI480D60ZW-LP	Single phase panel mounted DC to AC SSR 480VAC 60A zero crossing
CWD4850	ASR-SI480D60ZW-LR5U	Single phase panel mounted DC to AC SSR 480VAC 60A zero crossing
CWA4850	ASR-SI480D60ZW-LU	Single phase panel mounted DC to AC SSR 480VAC 60A zero crossing
CWA4850H	ASR-SI480D60ZW-LUP	Single phase panel mounted DC to AC SSR 480VAC 60A zero crossing
HD4850T	ASR-SI480D60ZW-LM	Single phase panel mounted DC to AC SSR 480VAC 60A zero crossing
CWD4850P	ASR-SI480D60ZW-LMR5U	Single phase panel mounted DC to AC SSR 480VAC 60A zero crossing
CWA4850P	ASR-SI480D60ZW-LMU	Single phase panel mounted DC to AC SSR 480VAC 60A zero crossing
HD4850-10	ASR-SI480D60RW-L	Single phase panel mounted DC to AC SSR 480VAC 60A random on
D4850-10		Single phase panel mounted DC to AC SSR 480VAC 60A random on
H12D4850-10		Single phase panel mounted DC to AC SSR 480VAC 60A random on
H12D4850G-10		Single phase panel mounted DC to AC SSR 480VAC 60A random on
CWD4850-10	ASR-SI480D60RW-LR5U	Single phase panel mounted DC to AC SSR 480VAC 60A random on
CWA4850-10	ASR-SI480D60RW-LU	Single phase panel mounted DC to AC SSR 480VAC 60A random on
HD4850KT-10	ASR-SI480D60RW-LM	Single phase panel mounted DC to AC SSR 480VAC 60A random on
H12D4875	ASR-SI480DZ80W-LH	Single phase panel mounted DC to AC SSR 480VAC 80A zero crossing
HD4875		Single phase panel mounted DC to AC SSR 480VAC 80A zero crossing
D4875		Single phase panel mounted DC to AC SSR 480VAC 80A zero crossing
HD4875-10	ASR-SI480D80RW-LH	Single phase panel mounted DC to AC SSR 480VAC 80A random on
D4875-10		Single phase panel mounted DC to AC SSR 480VAC 80A random on
HA6090	ASR-SI600A100ZY-LH	Single phase panel mounted AC to AC SSR 600VAC 100A zero crossing
HA6090-10	ASR-SI600A100RY-LH	Single phase panel mounted AC to AC SSR 600VAC 100A random on
HA60125	ASR-SI600A125ZY-LH	Single phase panel mounted AC to AC SSR 600VAC 125A zero crossing
HA60125-10	ASR-SI600A125RY-LH	Single phase panel mounted AC to AC SSR 600VAC 125A random on
HA6025	ASR-SI600A25Y-L	Single phase panel mounted AC to AC SSR 600VAC 25A zero crossing
HA6025-10	ASR-SI600A25RY-L	Single phase panel mounted AC to AC SSR 600VAC 25A random on
HA6050	ASR-SI600A60ZY-L	Single phase panel mounted AC to AC SSR 600VAC 60A zero crossing
HA6050-10	ASR-SI600A60RY-L	Single phase panel mounted AC to AC SSR 600VAC 60A random on
H12WD4890	ASR-SI600D100ZW-LH	Single phase panel mounted DC to AC SSR 600VAC 100A zero crossing
HD6090		Single phase panel mounted DC to AC SSR 600VAC 100A zero crossing
H16WD6090		Single phase panel mounted DC to AC SSR 600VAC 100A zero crossing
H12WD4890G		Single phase panel mounted DC to AC SSR 600VAC 100A zero crossing
H16WD6090G		Single phase panel mounted DC to AC SSR 600VAC 100A zero crossing
H16WD6090GH	ASR-SI600D100ZW-LHP	Single phase panel mounted DC to AC SSR 600VAC 100A zero crossing
H12WD4890PGH	ASR-SI600D100ZW-LMP	Single phase panel mounted DC to AC SSR 600VAC 100A zero crossing
H12WD4890PG	ASR-SI600D100ZW-LMH	Single phase panel mounted DC to AC SSR 600VAC 100A zero crossing
H12WD4890-10		Single phase panel mounted DC to AC SSR 600VAC 100A random on

HD6090-10	ASR-SI600D100RW-LH	Single phase panel mounted DC to AC SSR 600VAC 100A random on
H16WD6090-10		Single phase panel mounted DC to AC SSR 600VAC 100A random on
H12WD48110	ASR-SI600D125ZW-LH	Single phase panel mounted DC to AC SSR 600VAC 125A zero crossing
H12WD48125		Single phase panel mounted DC to AC SSR 600VAC 125A zero crossing
HD60125		Single phase panel mounted DC to AC SSR 600VAC 125A zero crossing
HD60125K		Single phase panel mounted DC to AC SSR 600VAC 125A zero crossing
H12WD48125-10	ASR-SI600D125RW-LH	Single phase panel mounted DC to AC SSR 600VAC 125A random on
HD60125-10		Single phase panel mounted DC to AC SSR 600VAC 125A random on
H12WD4825	ASR-SI600D25ZW-L	Single phase panel mounted DC to AC SSR 600VAC 25A zero crossing
HD6025		Single phase panel mounted DC to AC SSR 600VAC 25A zero crossing
H16WD6025		Single phase panel mounted DC to AC SSR 600VAC 25A zero crossing
H16WD6025G		Single phase panel mounted DC to AC SSR 600VAC 25A zero crossing
HD6025F	ASR-SI600D25ZW-LQ	Single phase panel mounted DC to AC SSR 600VAC 25A zero crossing
H12WD4825FPG	ASR-SI600D25ZW-LMQ	Single phase panel mounted DC to AC SSR 600VAC 25A zero crossing
H12WD4825-10	ASR-SI600D25RW-L	Single phase panel mounted DC to AC SSR 600VAC 25A random on
HD6025-10		Single phase panel mounted DC to AC SSR 600VAC 25A random on
HD6025F-10	ASR-SI600D25RW-LQ	Single phase panel mounted DC to AC SSR 600VAC 25A random on
HD6050	ASR-SI600D60ZW-L	Single phase panel mounted DC to AC SSR 600VAC 60A zero crossing
HD6050K		Single phase panel mounted DC to AC SSR 600VAC 60A zero crossing
H12WD4850		Single phase panel mounted DC to AC SSR 600VAC 60A zero crossing
H12WD4850G		Single phase panel mounted DC to AC SSR 600VAC 60A zero crossing
H12WD4850PG	ASR-SI600D60ZW-LM	Single phase panel mounted DC to AC SSR 600VAC 60A zero crossing
H12WD4850PGH	ASR-SI600D60ZW-LTP	Single phase panel mounted DC to AC SSR 600VAC 60A zero crossing
HD6050-10	ASR-SI600D60RW-L	Single phase panel mounted DC to AC SSR 600VAC 60A random on
H16WD6050-10		Single phase panel mounted DC to AC SSR 600VAC 60A random on
H12WD4850-10		Single phase panel mounted DC to AC SSR 600VAC 60A random on
H12WD4875	ASR-SI600D80ZW-L	Single phase panel mounted DC to AC SSR 600VAC 80A zero crossing
H16WD6075G		Single phase panel mounted DC to AC SSR 600VAC 80A zero crossing
H12WD4875PG	ASR-SI600D80ZW-LM	Single phase panel mounted DC to AC SSR 600VAC 80A zero crossing
H12WD4875-10	ASR-SI600D80RW-L	Single phase panel mounted DC to AC SSR 600VAC 80A random on
CD2425W1U	ASR-SID240D25ZL	Dual pole panel mounted DC to AC SSR 240VAC 25A zero crossing
CD2425W2V		Dual pole panel mounted DC to AC SSR 240VAC 25A zero crossing
CD2425W3V		Dual pole panel mounted DC to AC SSR 240VAC 25A zero crossing
CD2425W4V		Dual pole panel mounted DC to AC SSR 240VAC 25A zero crossing
CD2425W4UH	ASR-SID240D25ZL-P	Dual pole panel mounted DC to AC SSR 240VAC 25A zero crossing
CD2450W2UH	ASR-SID240D50ZL-P	Dual pole panel mounted DC to AC SSR 240VAC 50A zero crossing
CD2450W3UH		Dual pole panel mounted DC to AC SSR 240VAC 50A zero crossing

CD2450D1U	ASR-SID240D50ZL-S	Dual pole panel mounted DC to AC SSR 240VAC 50A zero crossing	
CD2450W2V		Dual pole panel mounted DC to AC SSR 240VAC 50A zero crossing	
CD2450W3U		Dual pole panel mounted DC to AC SSR 240VAC 50A zero crossing	
CD2450W3V		Dual pole panel mounted DC to AC SSR 240VAC 50A zero crossing	
CD2450W4U		Dual pole panel mounted DC to AC SSR 240VAC 50A zero crossing	
CD2450W4V		Dual pole panel mounted DC to AC SSR 240VAC 50A zero crossing	
H12D4825DE	ASR-SID480D25ZH	Dual pole panel mounted DC to AC SSR 480VAC 25A zero crossing	
H12D4840DE	ASR-SID480D40ZH	Dual pole panel mounted DC to AC SSR 480VAC 40A zero crossing	
H12D4840DE-10	ASR-SID480D40RH	Dual pole panel mounted DC to AC SSR 480VAC 40A random on	
H12D4825D	ASR-SID480D25ZL	Dual pole panel mounted DC to AC SSR 480VAC 25A zero crossing	
CD4825W2U		Dual pole panel mounted DC to AC SSR 480VAC 25A zero crossing	
CD4825W2V		Dual pole panel mounted DC to AC SSR 480VAC 25A zero crossing	
CD4825W3V	ASR-SID480D25ZL-C	Dual pole panel mounted DC to AC SSR 480VAC 25A zero crossing	
CD4825W3VH	ASR-SID480D25ZL-P	Dual pole panel mounted DC to AC SSR 480VAC 25A zero crossing	
CD4825W4VH		Dual pole panel mounted DC to AC SSR 480VAC 25A zero crossing	
CD4825W4U	ASR-SID480D25ZL-S	Dual pole panel mounted DC to AC SSR 480VAC 25A zero crossing	
CD4825W4V		Dual pole panel mounted DC to AC SSR 480VAC 25A zero crossing	
CC4825W4U		Dual pole panel mounted DC to AC SSR 480VAC 25A zero crossing	
CC4825W4V		Dual pole panel mounted DC to AC SSR 480VAC 25A zero crossing	
H12D4840D	ASR-SID480D40ZL	Dual pole panel mounted DC to AC SSR 480VAC 40A zero crossing	
H12D4840D-10	ASR-SID480D40RL	Dual pole panel mounted DC to AC SSR 480VAC 40A zero crossing	
CD4850W2U	ASR-SID480D50ZL-S	Dual pole panel mounted DC to AC SSR 480VAC 50A zero crossing	
CD4850W2V		Dual pole panel mounted DC to AC SSR 480VAC 50A zero crossing	
CD4850W3U		Dual pole panel mounted DC to AC SSR 480VAC 50A zero crossing	
CD4850W3V		Dual pole panel mounted DC to AC SSR 480VAC 50A zero crossing	
CD4850W4U		Dual pole panel mounted DC to AC SSR 480VAC 50A zero crossing	
CD4850W4V		Dual pole panel mounted DC to AC SSR 480VAC 50A zero crossing	
CC4850W2U		Dual pole panel mounted DC to AC SSR 480VAC 50A zero crossing	
CC4850W2V		Dual pole panel mounted DC to AC SSR 480VAC 50A zero crossing	
CC4850W3U		Dual pole panel mounted DC to AC SSR 480VAC 50A zero crossing	
CC4850W3V		Dual pole panel mounted DC to AC SSR 480VAC 50A zero crossing	
CC4850W4U		Dual pole panel mounted DC to AC SSR 480VAC 50A zero crossing	
CC4850W4V		Dual pole panel mounted DC to AC SSR 480VAC 50A zero crossing	
CC4850W3VH		ASR-SID480D50ZL-SP	Dual pole panel mounted DC to AC SSR 480VAC 50A zero crossing
CD4850W3VH			Dual pole panel mounted DC to AC SSR 480VAC 50A zero crossing
CD4850W4VH	Dual pole panel mounted DC to AC SSR 480VAC 50A zero crossing		
EL240A5-24		Mini type single pole panel mounted DC to AC SSR 240VAC 10A zero crossing	

EL240A10-24	ASR-SIM240D10ZW-LQ	Mini type single pole panel mounted DC to AC SSR 240VAC 10A zero crossing
EL240A10-05		Mini type single pole panel mounted DC to AC SSR 240VAC 10A zero crossing
EL240A5-05		Mini type single pole panel mounted DC to AC SSR 240VAC 10A zero crossing
EL240A10-12		Mini type single pole panel mounted DC to AC SSR 240VAC 10A zero crossing
EL240A5-12		Mini type single pole panel mounted DC to AC SSR 240VAC 10A zero crossing
EZ240D5		Mini type single pole panel mounted DC to AC SSR 240VAC 10A zero crossing
EL240A10R-24	ASR-SIM240D10RW-LQ	Mini type single pole panel mounted DC to AC SSR 240VAC 10A random on
EL240A5R-24		Mini type single pole panel mounted DC to AC SSR 240VAC 10A random on
EL240A10R-05		Mini type single pole panel mounted DC to AC SSR 240VAC 10A random on
EL240A5R-05		Mini type single pole panel mounted DC to AC SSR 240VAC 10A random on
EL240A10R-12		Mini type single pole panel mounted DC to AC SSR 240VAC 10A random on
EL240A5R-12		Mini type single pole panel mounted DC to AC SSR 240VAC 10A random on
EZ240D5R	Mini type single pole panel mounted DC to AC SSR 240VAC 10A random on	
EZE240D12S	ASR-SIM240D16ZW-LQ	Mini type single pole panel mounted DC to AC SSR 240VAC 16A zero crossing
EZE240D12		Mini type single pole panel mounted DC to AC SSR 240VAC 16A zero crossing
EZ240D12		Mini type single pole panel mounted DC to AC SSR 240VAC 16A zero crossing
EZ240D12S		Mini type single pole panel mounted DC to AC SSR 240VAC 16A zero crossing
EZE240D12RS	ASR-SIM240D16RW-LQ	Mini type single pole panel mounted DC to AC SSR 240VAC 16A random on
EZE240D12R		Mini type single pole panel mounted DC to AC SSR 240VAC 16A random on
EZ240D12R		Mini type single pole panel mounted DC to AC SSR 240VAC 16A random on
EL240A20-24	ASR-SIM240D25ZW-LQ	Mini type single pole panel mounted DC to AC SSR 240VAC 16A zero crossing
EL240A20-05		Mini type single pole panel mounted DC to AC SSR 240VAC 16A zero crossing
EL240A20-12		Mini type single pole panel mounted DC to AC SSR 240VAC 16A zero crossing
EZE240D18S		Mini type single pole panel mounted DC to AC SSR 240VAC 16A zero crossing
EZE240D18		Mini type single pole panel mounted DC to AC SSR 240VAC 16A zero crossing
EZ240D18		Mini type single pole panel mounted DC to AC SSR 240VAC 16A zero crossing
EZ240D18S		Mini type single pole panel mounted DC to AC SSR 240VAC 16A zero crossing
EL240A20R-24	ASR-SIM240D25RW-LQ	Mini type single pole panel mounted DC to AC SSR 240VAC 16A random on
EL240A20R-05		Mini type single pole panel mounted DC to AC SSR 240VAC 16A random on
EL240A20R-12		Mini type single pole panel mounted DC to AC SSR 240VAC 16A random on
EZ240D18R		Mini type single pole panel mounted DC to AC SSR 240VAC 16A random on
EZ240D18RS		Mini type single pole panel mounted DC to AC SSR 240VAC 16A random on
CN240A05	ASR-SMA240D2ZP	Sim type PCB mounted DC to AC SSR 240VAC 2A zero crossing
CN240A24	ASR-SMA240D2ZR	Sim type PCB mounted DC to AC SSR 240VAC 2A zero crossing
DRA-CN240A24	ASR-SMA240D2ZR-K	Sim type PCB mounted DC to AC SSR 240VAC 2A zero crossing
DRA-CN240A05	ASR-SMA240D2ZN-K	Sim type PCB mounted DC to AC SSR 240VAC 2A zero crossing
CN240A60	ASR-SMA240D2ZT	Sim type PCB mounted DC to AC SSR 240VAC 2A zero crossing

CN024D05	ASR-SMD24D4P	Sim type PCB mounted DC to DC SSR 24VDC 4A zero crossing
CN024D24	ASR-SMD24D4R	Sim type PCB mounted DC to DC SSR 24VDC 4A zero crossing
DRA-CN024D24	ASR-SMD24D4R-K	Sim type PCB mounted DC to DC SSR 24VDC 4A zero crossing
DRA-CN024D05	ASR-SMD24D4N-K	Sim type PCB mounted DC to DC SSR 24VDC 4A zero crossing
CN024D60	ASR-SMD24D4T	Sim type PCB mounted DC to DC SSR 24VDC 4A zero crossing
CN048D05	ASR-SMD48D0.1P	Sim type PCB mounted DC to DC SSR 48VDC 0.1A zero crossing
CN048D24	ASR-SMD48D0.1R	Sim type PCB mounted DC to DC SSR 48VDC 0.1A zero crossing
DRA-CN048D24	ASR-SMD48D0.1R-K	Sim type PCB mounted DC to DC SSR 48VDC 0.1A zero crossing
DRA-CN048D05	ASR-SMD48D0.1N-K	Sim type PCB mounted DC to DC SSR 48VDC 0.1A zero crossing
CN048D60	ASR-SMD48D0.1T	Sim type PCB mounted DC to DC SSR 48VDC 0.1A zero crossing
DR06D03	ASR-SMD48D3P-K	Sim type PCB mounted DC to DC SSR 48VDC 3A zero crossing
DR06D12		Sim type PCB mounted DC to DC SSR 48VDC 3A zero crossing
D53TP25D	ASR-SQF480D25ZW	Three phase panel mounted SSR DC to AC 480VAC 25A failure detection function
D53TP25C		Three phase panel mounted SSR DC to AC 480VAC 25A failure detection function
D53TP25CH	ASR-SQF480D25ZW-P	Three phase panel mounted SSR DC to AC 480VAC 25A zero crossing
D53TP25C-10	ASR-SQF480D25RW	Three phase panel mounted SSR DC to AC 480VAC 25A zero crossing
D53TP25D-10		Three phase panel mounted SSR DC to AC 480VAC 25A zero crossing
D53TP25CH-10	ASR-SQF480D25RW-P	Three phase panel mounted SSR DC to AC 480VAC 25A random on
D53TP50D	ASR-SQF480D60ZW	Three phase panel mounted SSR DC to AC 480VAC 60A zero crossing
D53TP50C		Three phase panel mounted SSR DC to AC 480VAC 60A zero crossing
D53TP50DH	ASR-SQF480D60ZW-P	Three phase panel mounted SSR DC to AC 480VAC 60A zero crossing
D53TP50CH		Three phase panel mounted SSR DC to AC 480VAC 60A zero crossing
D53TP50C-10	ASR-SQF480D60RW	Three phase panel mounted SSR DC to AC 480VAC 60A random on
D53TP50D-10		Three phase panel mounted SSR DC to AC 480VAC 60A random on
D53TP50CH-10	ASR-SQF480D60RW-P	Three phase panel mounted SSR DC to AC 480VAC 60A random on
CKRB2410	ASR-SV240A10ZY-L	Din-rail heatsink integrated SSR AC to AC 240VAC 10A zero crossing
GNR10BHZ	ASR-SV240A10ZY-LM	Din-rail heatsink integrated SSR AC to AC 240VAC 10A zero crossing
GNR10BCZ		Din-rail heatsink integrated SSR AC to AC 240VAC 10A zero crossing
CKRA2410P	ASR-SV240A10RY-L	Din-rail heatsink integrated SSR AC to AC 240VAC 10A zero crossing
CKRA2410-10		Din-rail heatsink integrated SSR AC to AC 240VAC 10A random on
CKRA2420	ASR-SV240A20ZY-L	Din-rail heatsink integrated SSR AC to AC 240VAC 20A zero crossing
CKRB2420		Din-rail heatsink integrated SSR AC to AC 240VAC 20A zero crossing
CKRA2420P	ASR-SV240A20ZY-LM	Din-rail heatsink integrated SSR AC to AC 240VAC 20A zero crossing
CKRA2420-10	ASR-SV240A20RY-L	Din-rail heatsink integrated SSR AC to AC 240VAC 20A random on
CKRB2420-10		Din-rail heatsink integrated SSR AC to AC 240VAC 20A random on
CKRA2430	ASR-SV240A30ZY-L	Din-rail heatsink integrated SSR AC to AC 240VAC 30A zero crossing
CKRA2430P	ASR-SV240A30ZY-LM	Din-rail heatsink integrated SSR AC to AC 240VAC 30A zero crossing

CKRA2430-10	ASR-SV240A30RY-L	Din-rail heatsink integrated SSR AC to AC 240VAC 30A random on
CKRB2430-10		Din-rail heatsink integrated SSR AC to AC 240VAC 30A random on
CMRA2435	ASR-SV240A40ZY-L	Din-rail heatsink integrated SSR AC to AC 240VAC 40A zero crossing
CMRA2435-10	ASR-SV240A40RY-L	Din-rail heatsink integrated SSR AC to AC 240VAC 40A random on
CKRD2410	ASR-SV240D10ZW-L	Din-rail heatsink integrated SSR DC to AC 240VAC 10A zero crossing
GNR10DCZ	ASR-SV240D10ZW-LM	Din-rail heatsink integrated SSR DC to AC 240VAC 10A zero crossing
GNR10DHZ		Din-rail heatsink integrated SSR DC to AC 240VAC 10A zero crossing
CKRD2410P		Din-rail heatsink integrated SSR DC to AC 240VAC 10A zero crossing
CKRD2410-10	ASR-SV240D10RW-L	Din-rail heatsink integrated SSR DC to AC 240VAC 10A random on
CKRD2420	ASR-SV240D20ZW-L	Din-rail heatsink integrated SSR DC to AC 240VAC 20A zero crossing
CKRD2420P	ASR-SV240D20ZW-LM	Din-rail heatsink integrated SSR DC to AC 240VAC 20A zero crossing
CKRD2420-10	ASR-SV240D20RW-L	Din-rail heatsink integrated SSR DC to AC 240VAC 20A random on
CKRD2430	ASR-SV240D30ZW-L	Din-rail heatsink integrated SSR DC to AC 240VAC 30A zero crossing
CKRD2430P	ASR-SV240D30ZW-LM	Din-rail heatsink integrated SSR DC to AC 240VAC 30A zero crossing
CKRD2430-10	ASR-SV240D30RW-L	Din-rail heatsink integrated SSR DC to AC 240VAC 30A random on
CMRD2435	ASR-SV240D40ZW-L	Din-rail heatsink integrated SSR DC to AC 240VAC 40A zero crossing
CKRA4810	ASR-SZ480A10ZY-L	Din-rail heatsink integrated SSR AC to AC 480VAC 10A zero crossing
CKRA4810P	ASR-SZ480A10ZY-LM	Din-rail heatsink integrated SSR AC to AC 480VAC 10A zero crossing
CKRA4810-10	ASR-SV480A10RY-L	Din-rail heatsink integrated SSR AC to AC 480VAC 10A random on
CKRA4820	ASR-SV480A20ZY-L	Din-rail heatsink integrated SSR AC to AC 480VAC 20A zero crossing
CKRB4820		Din-rail heatsink integrated SSR AC to AC 480VAC 20A zero crossing
CKRA4820P	ASR-SV480A20ZY-LM	Din-rail heatsink integrated SSR AC to AC 480VAC 20A zero crossing
CKRA4820-10	ASR-SV480A20RY-L	Din-rail heatsink integrated SSR AC to AC 480VAC 20A random on
CKRA4830	ASR-SV480A30ZY-L	Din-rail heatsink integrated SSR AC to AC 480VAC 30A zero crossing
CKRA4830P	ASR-SV480A30ZY-LM	Din-rail heatsink integrated SSR AC to AC 480VAC 30A zero crossing
CKRA4830-10	ASR-SV480A30RY-L	Din-rail heatsink integrated SSR AC to AC 480VAC 30A random on
CMRA4835	ASR-SV480A40ZY-L	Din-rail heatsink integrated SSR AC to AC 480VAC 40A zero crossing
CKRD4810	ASR-SV480D10ZW-L	Din-rail heatsink integrated SSR DC to AC 480VAC 10A zero crossing
CKRD4810P	ASR-SV480D10ZW-LM	Din-rail heatsink integrated SSR DC to AC 480VAC 10A zero crossing
CKRD4810-10	ASR-SV480D10RW-L	Din-rail heatsink integrated SSR DC to AC 480VAC 10A random on
CKRD4820	ASR-SV480D20ZW-L	Din-rail heatsink integrated SSR DC to AC 480VAC 20A zero crossing
CKRD4820P	ASR-SV480D20ZW-LM	Din-rail heatsink integrated SSR DC to AC 480VAC 20A zero crossing
CKRD4820-10	ASR-SV480D20RW-L	Din-rail heatsink integrated SSR DC to AC 480VAC 20A random on
CKRD4830	ASR-SV480D30ZW-L	Din-rail heatsink integrated SSR DC to AC 480VAC 30A zero crossing
CKRD4830P	ASR-SV480D30ZW-LM	Din-rail heatsink integrated SSR DC to AC 480VAC 30A zero crossing
CKRD4830-10	ASR-SV480D30RW-L	Din-rail heatsink integrated SSR DC to AC 480VAC 30A random on
CMRD4835	ASR-SV480D40ZW-L	Din-rail heatsink integrated SSR DC to AC 480VAC 40A zero crossing

--	--	--